



## **12 tonne Rail Drag Clamp**



### **INSPECTION**

Before using the drag clamp it should be fully inspected for cracks and distortion of the frame.

In particular check the welded collars, which retain the side pins, as these are particularly prone to damage.

If any damage is found, the clamp must be withdrawn from service and returned to ARBIL Ltd for repair.

### **USE**

Slide the clamp over the head of the rail.

Fully engage the side pins and ensure that they are turned so that the pin recess is completely engaged behind the welded collar.

We strongly advise the use of a shear pin device to ensure that the force applied to the clamp is not more than the design load.